

BONNEVILLE PERFORMANCE


INSTALLATION INSTRUCTIONS FOR THE BP/STORZ PERFORMANCE STEERING DAMPER KIT

- 1.) PLACE MOTORCYCLE ON SIDE OR CENTER STAND OR FRAME JACK AND STABLELIZE STEERING NECK.
- 2.) INSTALL THE 41 mm FORK TUBE CLAMP AT THE POSITION JUST BELOW THE FORK EAR ON THE LEFT SIDE FORK LEG.
- 3.) ATTACH THE STEERING DAMPER TO THE FORK LEG CLAMP— DO NOT TIGHTEN UNTIL ASSEMBLY IS FULLY ALIGNED.
- 4.) INSTALL BP CUSTOM FRAME BRACKET PHOTO A BELOW.



A.

- 5.) LOOSELY FASTEN THE 4 ALLEN HEAD CLAMP SCREWS—THIS WILL ALLOW YOU TO ALIGN THE FRAME CLAMP WITH THE STEERING DAMPER BODY CLAMP
- 6.) REMOVE HEIM JOINT FROM BODY CLAMP AND ROTATE THREADED END INTO THE FRAME CLAMP UNTIL IT STOPS.
- 7.) RE-ATTACH HEIM JOINT TO BODY CLAMP AND LOOSELY FASTEN ALLEN BOLT.

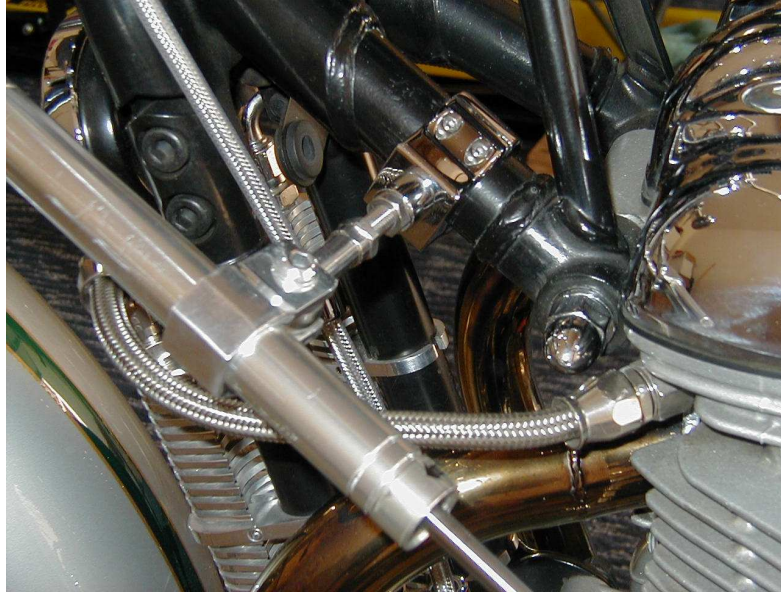

B.

- 8.) **NOW SLOWLY ROTATE THE STEERING HEAD FROM STOP TO STOP. MAKE THE FINE ADJUSTMENTS ON THE FRAME CLAMP AND BODY CLAMP SO THAT THE STEERING HEAD ROTATES FREELY FROM STOP TO STOP WITHOUT INTERFERENCE FROM THE MECHANISM OR THE MOTORCYCLE.**
- 9.) **NOW TIGHTEN ALL OF THE FASTENER LOCATIONS**
- 10.) **CHECK ALIGNMENT OF THE FRAME CLAMP AND BODY CLAMP MECHANISM AND TIGHTEN THE JAM NUTS AGAINST THE BASE OF THE HEIM JOINT AND THE SPACER THAT MEETS THE FRAME CLAMP AS DEPICTED IN PHOTO B ABOVE.**